
Handheld Mobile Computer SIRIO 4000 User Manual



CATALOGUE

| | |
|--------------------------------------|----|
| Chapter 1 Getting Started..... | 4 |
| Chapter 2 About The Device | 6 |
| Chapter 3 Call Function | 8 |
| Chapter 4 Barcode Reader..... | 10 |
| Chapter 5 RFID Reader | 12 |
| Chapter 6 Fingerprint Reader | 16 |
| Chapter 7 The Other Functions..... | 17 |
| Chapter 8 Device Specifications..... | 25 |

Chapter 1 Getting Started

1.1 Brief Instruction

MMS SIRIO 4000 is a series of Android powered smart terminals, with data capture, data processing, wireless communication. It is with high-reliability & high-expansibility. Auto & Accurate data collection is achieved in various business fields via a complete solution of premium options, the flexible solution among options and operators is suited-up. You will find out with SIRIO 4000, much easier deployment, reduced complexity, decreased maintenance, are the benefits for enterprises.

SIRIO 4000 meets industrial level IP64 (IEC sealing), is sufficient to routine applications, eg, railway inspection, road parking toll, vehicle inspection, logistics express, power inspection, warehousing management, chain retail, etc. Whether the mobile operators are working indoor or outdoor, with MMS SIRIO 4000, your business is always & highly efficient on-line.

Meeting industrial standards, designed to support a various of mobile solutions. With the build-in high performance Cortex-A9 1GHZ dual core processor technology, the operators need only one device to enjoy a convenient and easy job, SIRIO 4000 will be the ideal choice for key-fact business in mobile solutions, for simplified task flow, enhanced work efficiency, for shortened time to customer response, more satisfied customer care service.

MMS SIRIO 4000 comes with world wide band WCDMA technology. . Multi channels data and voice communication guarantees the real-time communication and data efficiency, SIRIO 4000 brings you the best ROI.

1.2 Precaution Before Using Battery

Do not leave batteries unused for extended periods of time, either in the product or in storage. When the battery has been unused for 6 months, check the charge status and charge or dispose of the battery as appropriate.

The typical estimated life of a Lithium-Ion battery is about two to three years or 300 to 500 charge cycles, whichever occurs first. One charge cycle is a period of use from fully charged, to fully discharged, and fully recharged again. Use a two to three year life expectancy for batteries that do not run through complete charge cycles.

Rechargeable Lithium-Ion batteries have a limited life and will gradually lose their capacity to hold a charge. This loss of capacity (aging) is irreversible. As the battery loses capacity, the length of time it will power the product (run time) decreases.

Lithium-Ion batteries continue to slowly discharge (self-discharge) when not in use or while in storage. Routinely check the battery's charge status. The user manual typically includes information on how to check battery status, as well as battery charging instructions.

Observe and note the run time that a new fully-charged battery provides for powering your product. Use the new battery run time as a basis to compare run times for older batteries. The run time of your battery will vary depending on the product's configuration and the applications that you run.

Routinely check the battery's charge status.

Carefully monitor batteries that are approaching the end of their estimated life.

Consider replacing the battery with a new one if you note either of the following conditions:

The battery run time drops below about 80% of the original run time.

The battery charge time increases significantly.

If a battery is stored or otherwise unused for an extended period, be sure to follow the storage instructions in this document. If you do not follow the instructions, and the battery has no charge remaining when you check it, consider it to be damaged. Do not attempt to recharge it or to use it. Replace it with a new battery.

Always follow the charging instructions provided with your product. Refer to your product's user manual and/or online help for detailed information about charging its battery.

Charge or discharge the battery to approximately 50% of capacity before storage.

Charge the battery to approximately 50% of capacity at least once every six months.

Remove the battery and store it separately from the product.

Store the battery at temperatures between 5 °C and 20 °C (41 °F and 68 °F).

Chapter 2 About The Device

2.1 Structure



<Front>



<Back>


Buttons:

| Button | Function |
|-------------------------|---|
| 1. Power Button | Press and hold to turn the device on or off |
| 2. App List View Button | View a list of apps running |
| 3. Home Button | Press to return to the home screen |
| 4. Cancel Button | Tap to return to the previous screen |

2.2 SD Card Installation

Detailed installation steps are as follows:

1. Open the SIM slot as the direction of 'Open/Lock' labeled;
2. Open the SD slot as the direction of 'Open/Lock' labeled;
3. Install the SD card properly;
4. Lock the SD slot and SIM slot properly;

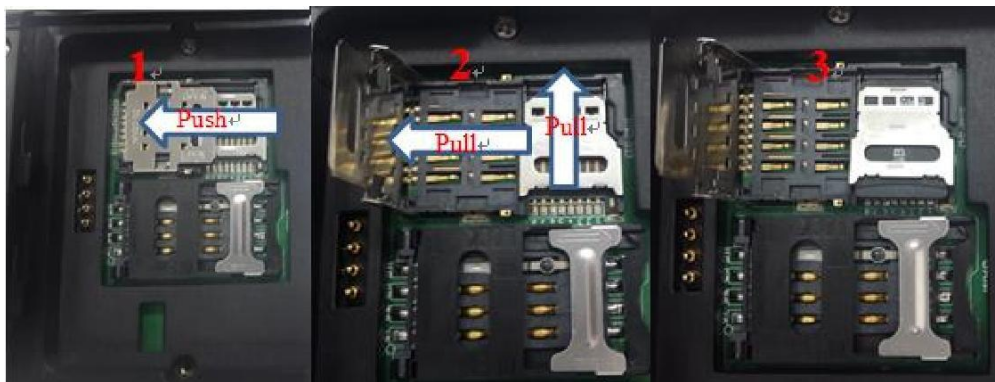

2.3 SIM Card Installation

1. Open the SIM slot as the direction of 'Open/Lock' labeled;
2. Install the SIM card correctly;
3. Lock the SIM slot properly;



2.4 Battery Installation

1. Push the battery down into the bottom of the battery;

2. Push the battery to the direction of the array;
3. Turn the battery lock;

2.5 Battery Charging

2.5.1 Direct Charging

Use the adapter to charge the battery via the USB connector of the snap-on;.

2.5.2 Cradle Charging




Connect the adapter with the power cable to charge the device.


2.6 Device Turning on/off

Press the 'Power' button on the side shortly due to turn on/off.

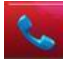

Chapter 3 Call Function


3.1 Phone

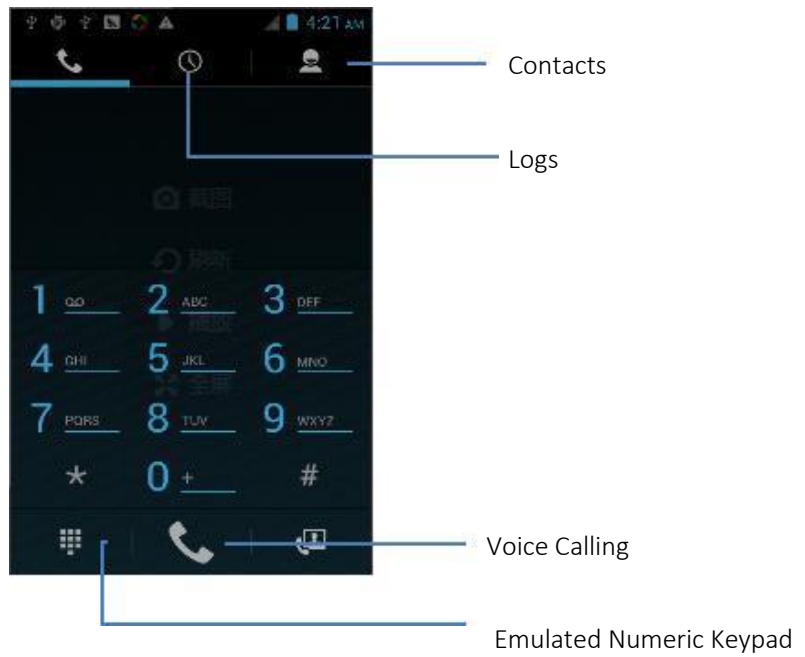1. Click this icon :
2. Click the number button to input the numbers;
3. Click the  button to confirm and dial;
4. Click the  to end the calling;





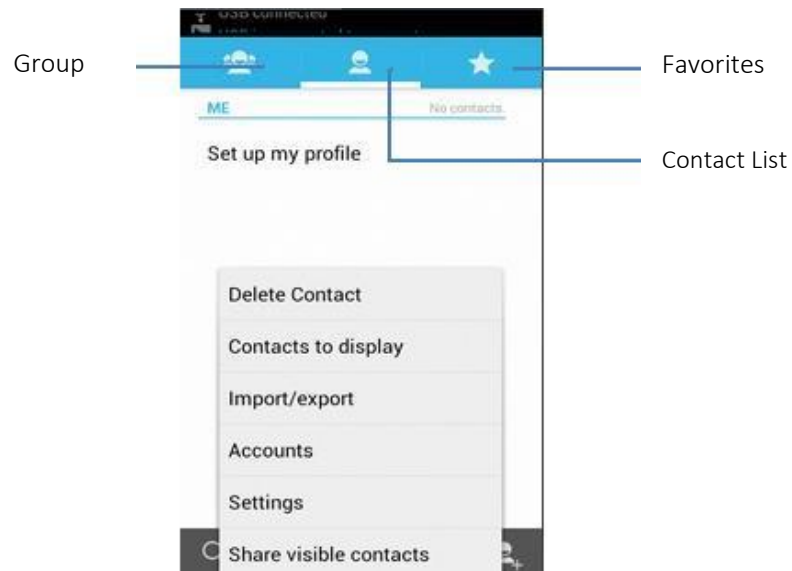


3.2 Contacts

1. Click 'Contacts' to open the contacts list;
2. Click '' to add the new contact;
3. Click '' to import/export or delete the contact list;



3.3 Messaging


1. Click '' to open the message list;
2. Click '' to input the content;
3. Click '' to send the message;
4. Click '' to add photos, videos;

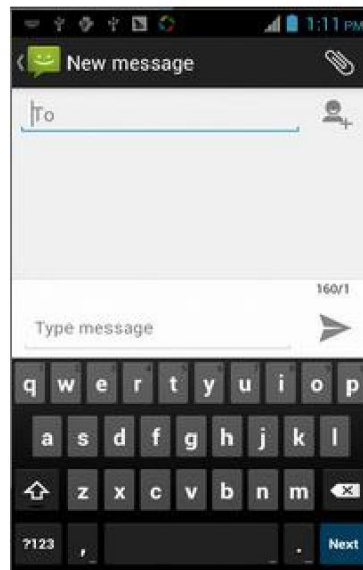

Chapter 4 Barcode Reader

1. Open the Barcode Demo within Handset Tools;
2. Press the 'Scan' button to start scanning, then the auto interval parameters can also be set;



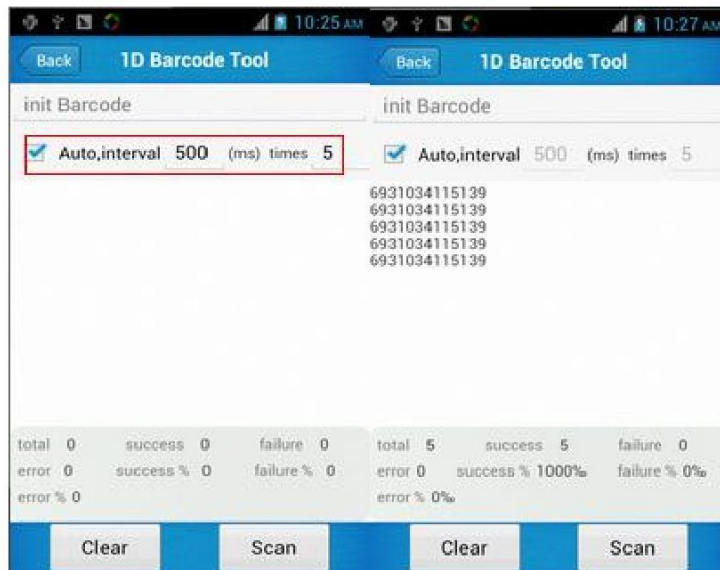

Note: Please scan the barcode correctly, otherwise the scanning might be failed;

1D Barcode



Right



Wrong

2D Image



Right




Wrong

Chapter 5 RFID Reader

5.1 Low Frequency

1. Open the RFID_LF Demo within Handset Tools and then press the 'Scan' button to start scanning;
2. Tag types including ID Card/Animal Tag/Hitag/HDX Tag/EM4450 can be also selected, and Hitag-S and EM4305 reading/writing are already supported by the device;

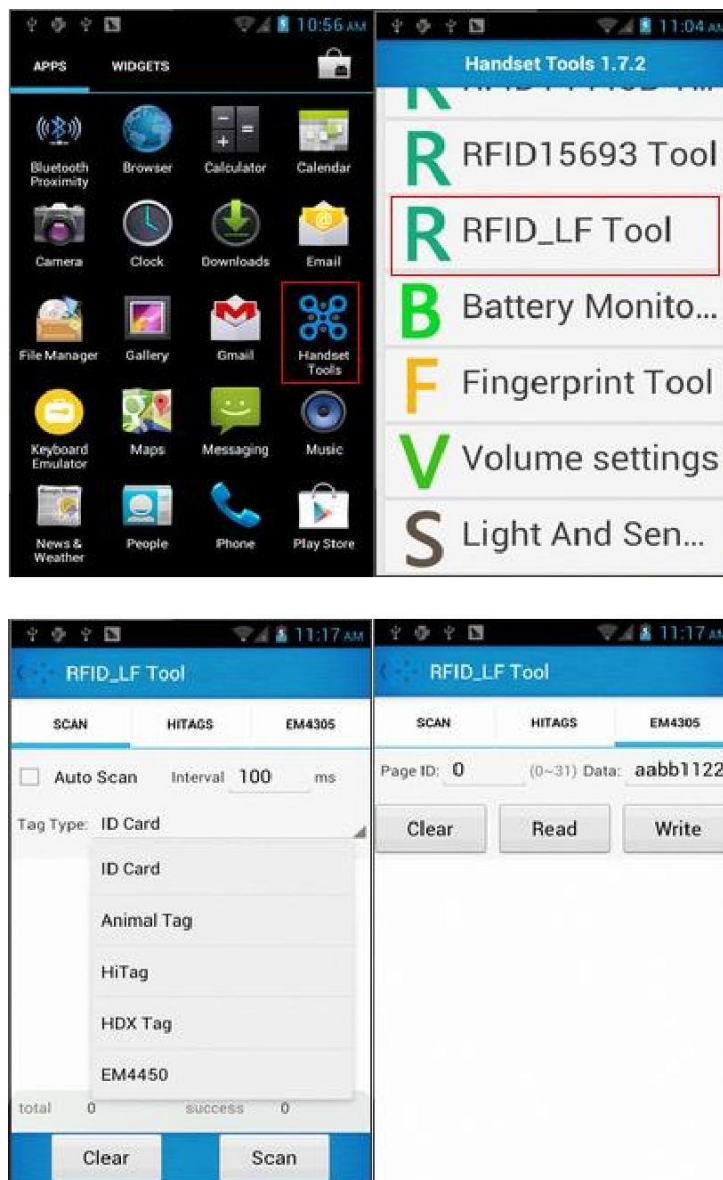


Note: please ensure that the LF module is embedded in the device, also please select the tag type correctly, otherwise the operation might not work. Meanwhile, please pay attention to the HDX and FDX-B since they are using different hardware due to the different working principles.

5.2 High Frequency


5.2.1 14443A

1. Open the RFID_14443A demo within Handset Tool, and press the 'Scan' button to start scanning;
2. Mifare and Ultra Light reading/writing are also supported;

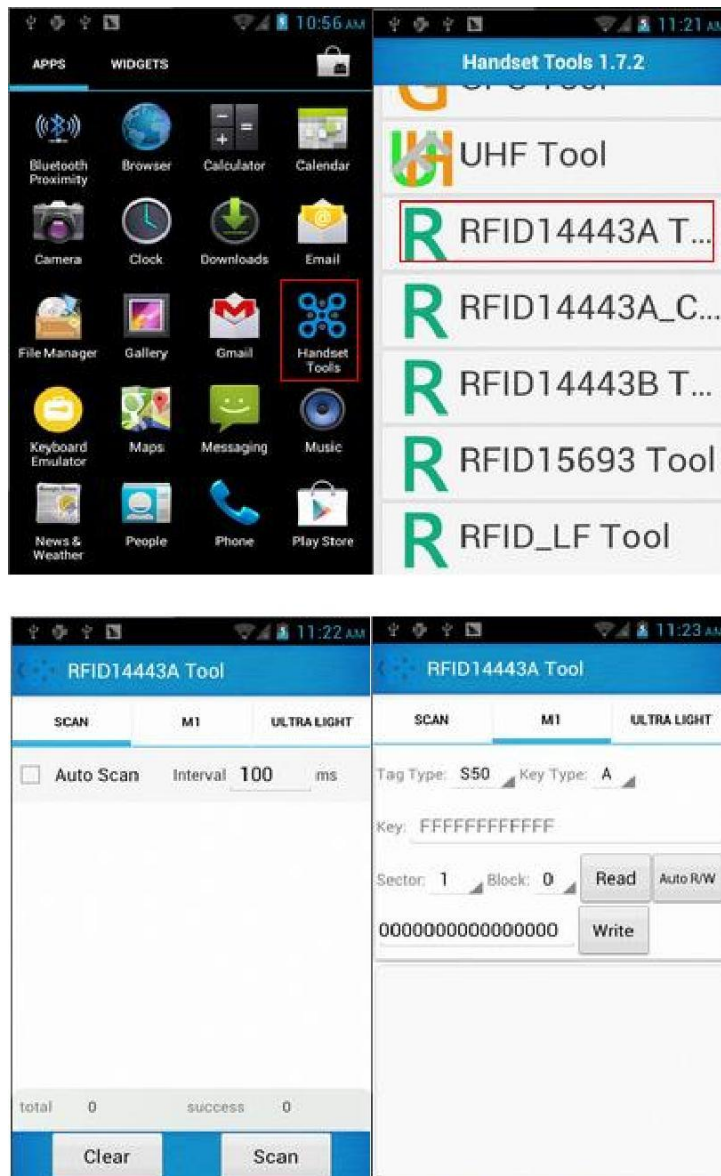

5.2.2 15693





1. Open the RFID_15693 demo within Handset Tool, and press the 'Scan' button to start scanning;
2. 15693 writing are also supported;

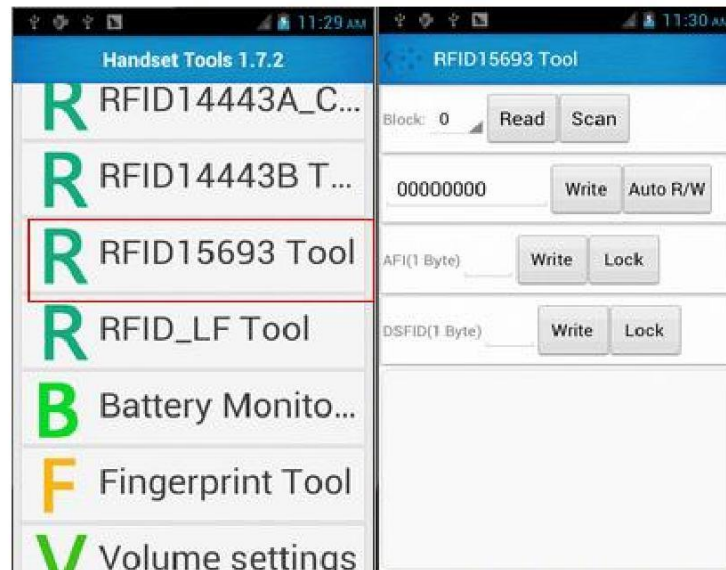

5.3 Ultra High Frequency

1. Open the UHF demo within Handset Tool, and press the 'Scan' button to start scanning;
2. Multiple tags reading and single tag reading/writing are also supported;



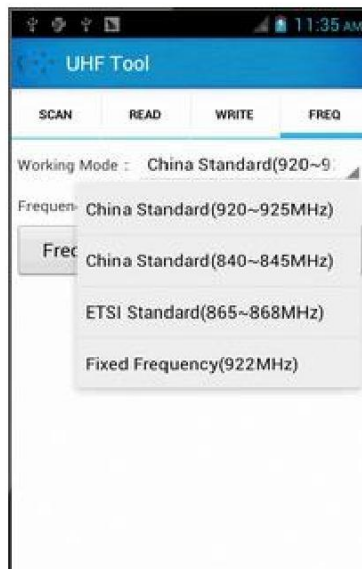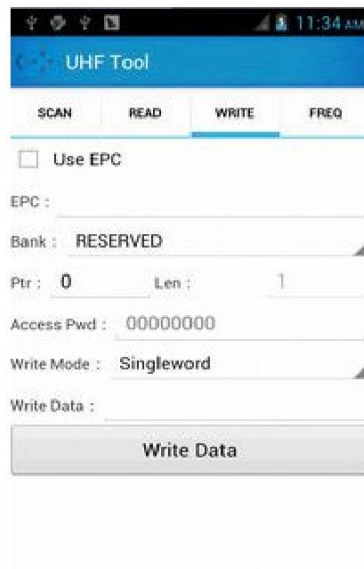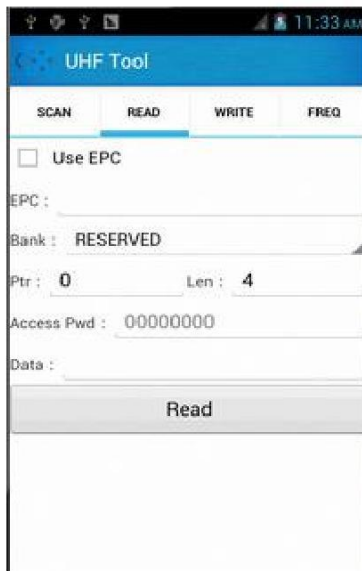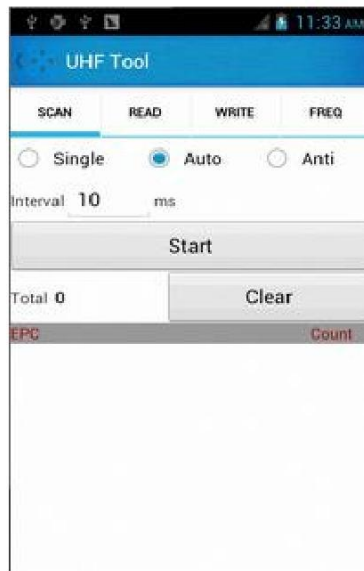

Chapter 6 Fingerprint Reader

1. Open the Fingerprint Demo in Handset Tool and then press the 'Scan' button to start scanning;
2. Put the finger to the fingerprint module and set the ID/name of the template under 'ACQUISITION';
3. Put the finger to the fingerprint module properly and identify by ID/Name/Score under 'IDENTIFICATION';
4. The local templates can also be checked under 'Data';



Chapter 7 The Other Functions



7.1 PING Tool



1. Open the Ping Tool in Handset Tool;
2. Set the Ping parameters and select the internal/external addresses;



7.2 Bluetooth


1. Open the Bluetooth demo in Handset Tool and turn on the Bluetooth;
2. Input the content or select the file, then scan the nearby Bluetooth printer and pair them;
3. Select the printer and click 'Print' to print the content;

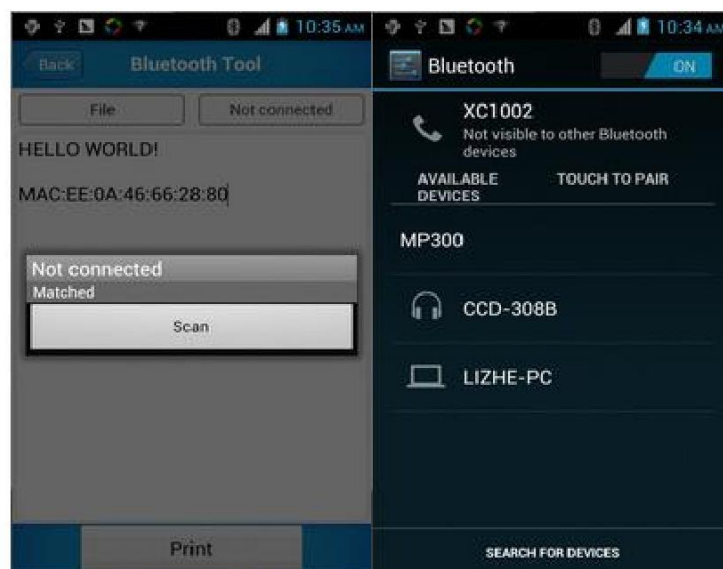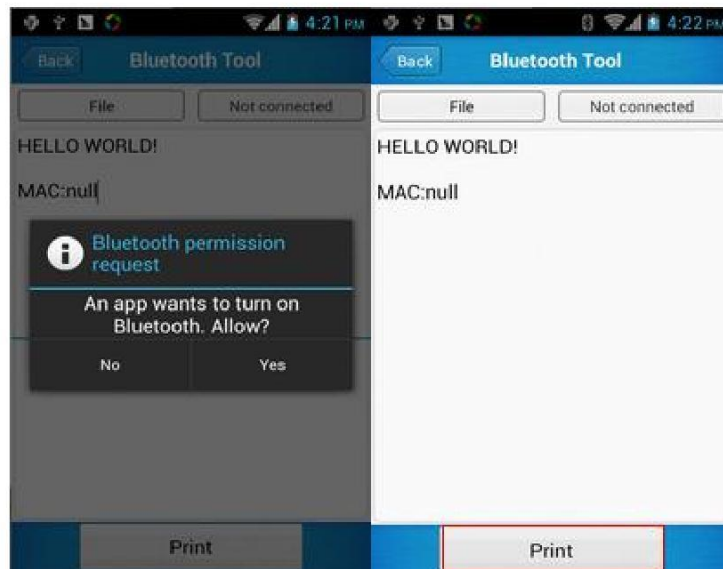

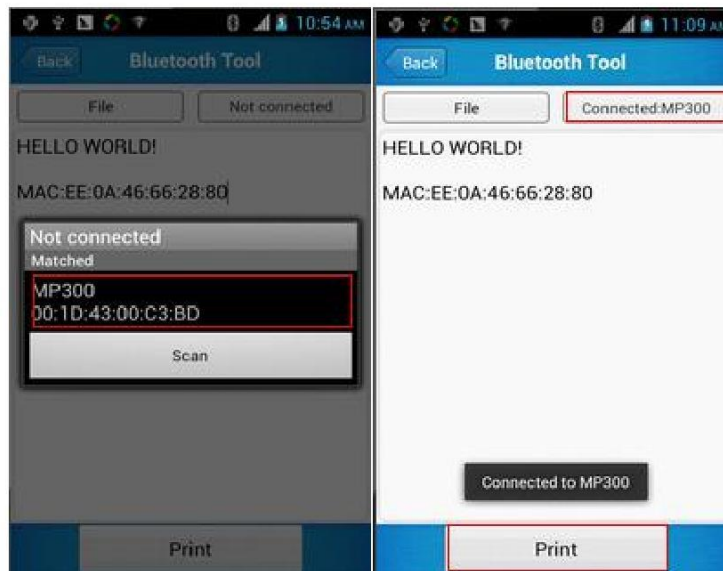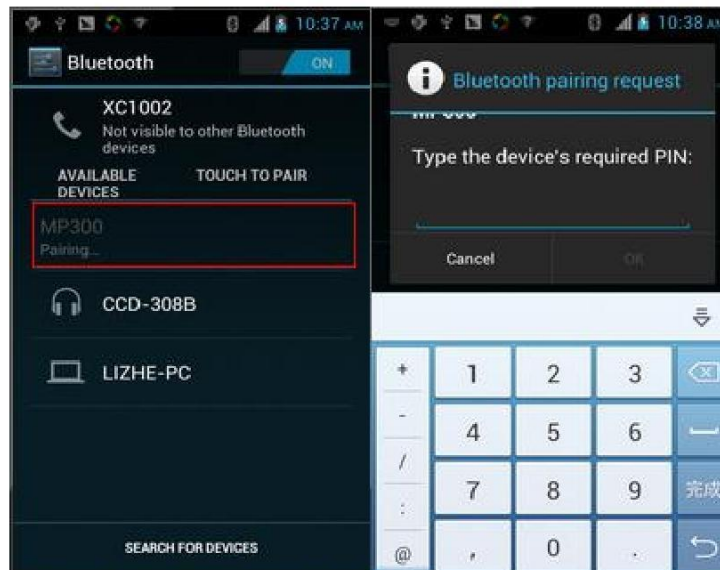


7.3 GPS

1. Open the GPS demo in Handset Tool and turn on GPS module;
2. Set the GPS parameters and get the GPS data information;

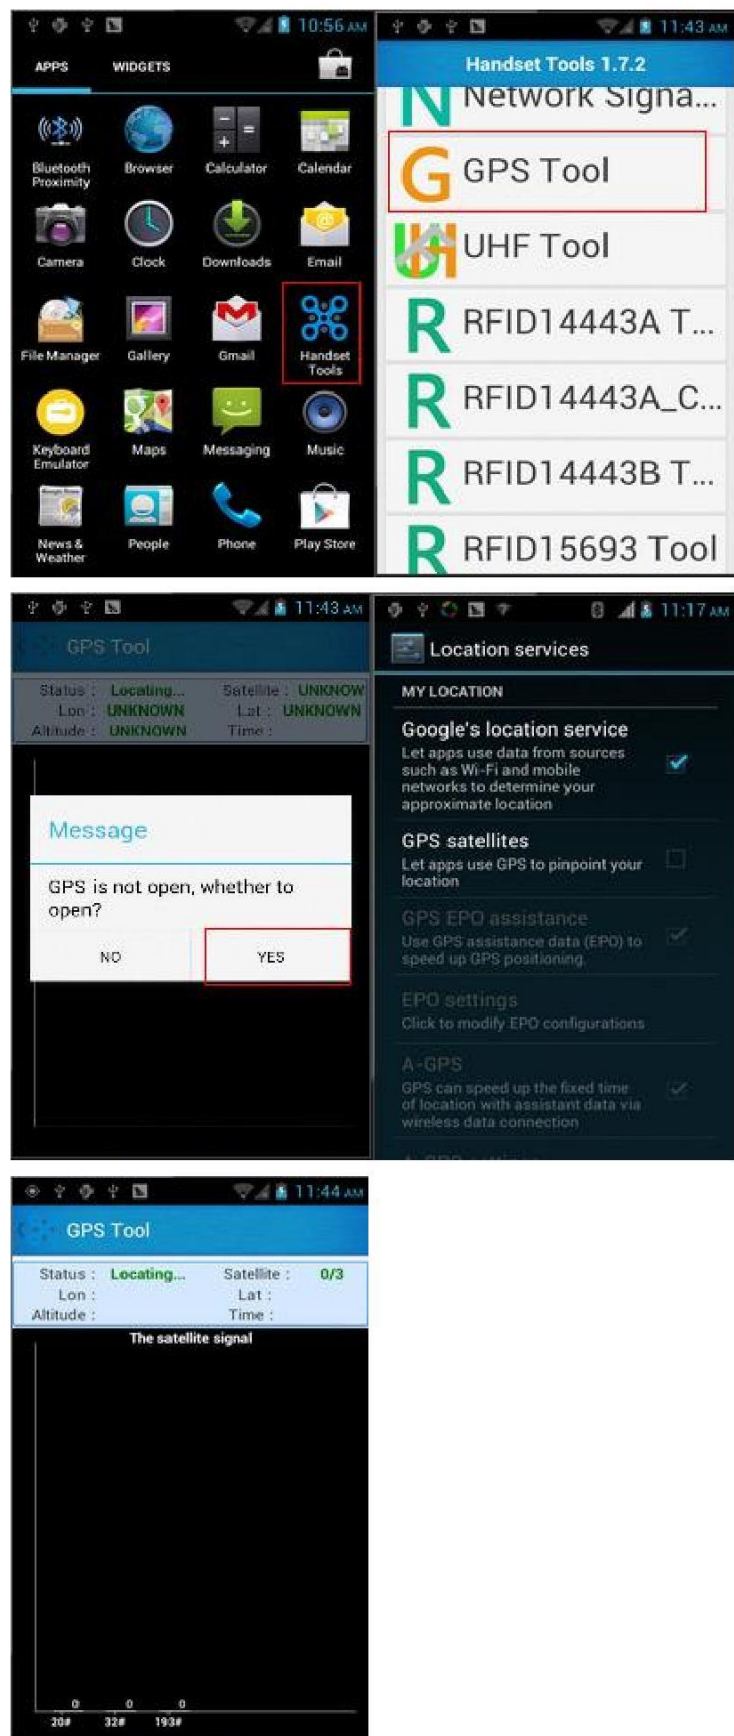

7.4 Volume Settings

1. Open the Volume Setting demo in Handset Tool;
2. Set the volumes based on the requirements;

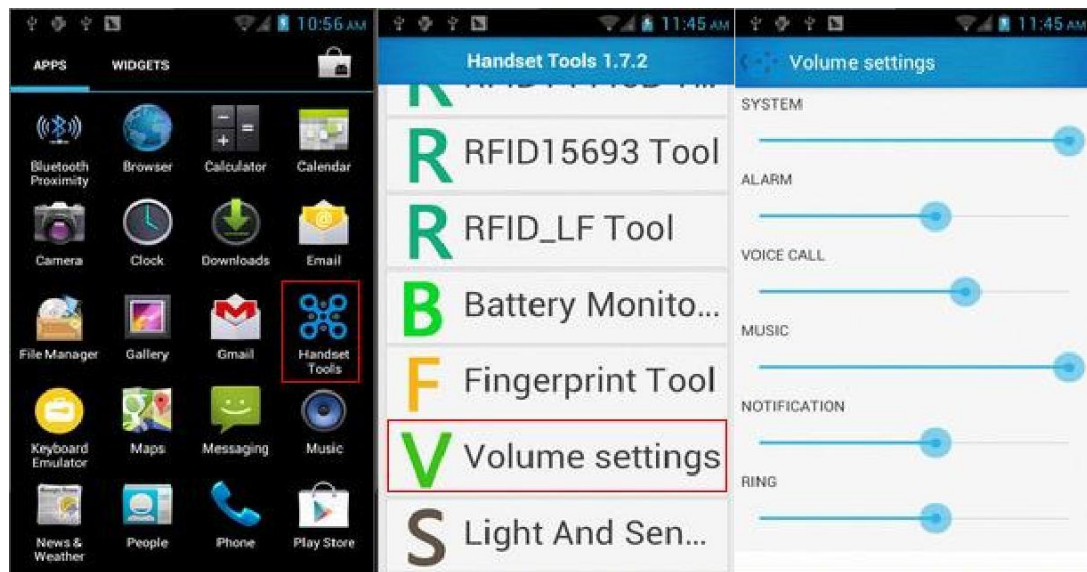


7.5 Light And Sensor

1. Open the Light And Sensor demo in Handset Tool;
2. Test the lights and sensor based on the requirements;





7.6 Keyboard Tool

1. Open the Keyboard Tool demo in Handset Tool;
2. Set and test the key values of the device;

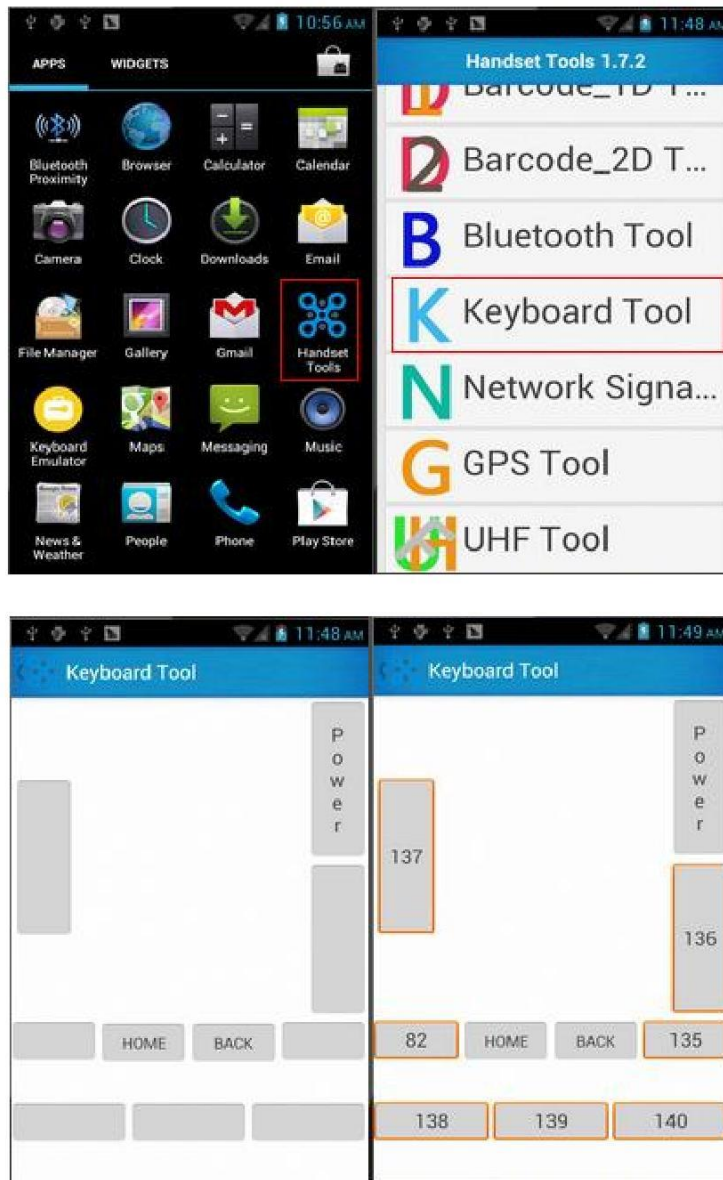

7.7 Network Signal

1. Open the Network Signal demo in Handset Tool;
2. Test the WIFI/Mobile signal based on the requirements;

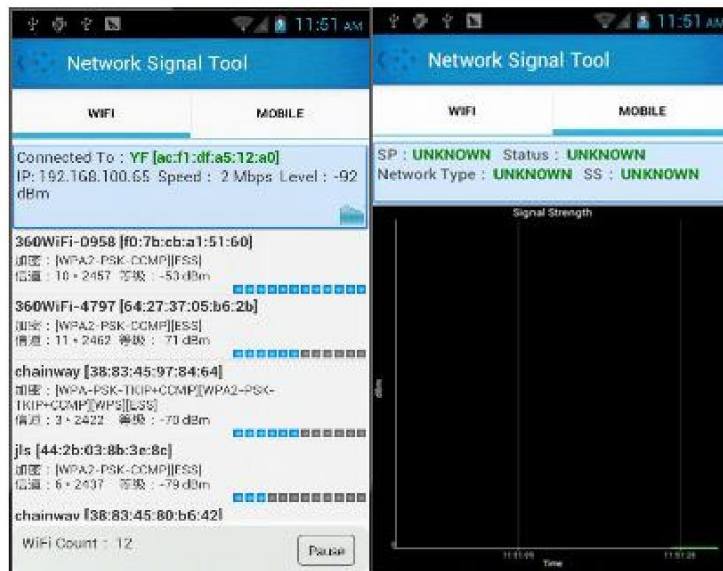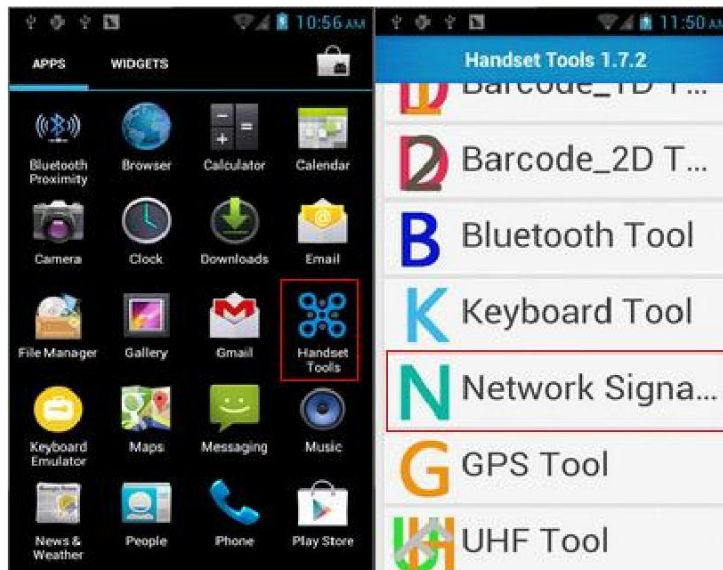

7.8 Keyboard Emulator

Keyboard Emulator can be used directly for multiple using environments and the output formats can including prefix/suffix/enter/tap can also be defined.



Chapter 8 Device Specifications

| Physical Characteristics | |
|------------------------------------|--|
| Dimensions | 153mm*75mm*29mm/6.02*2.95*1.14in. |
| Weight | 286g/10.09oz. (includes main battery) |
| Screen | 4in.WVGA (480*800) TFT-LCD, capacitive dual touch |
| Keyboard | 3 function keys, 3 side buttons |
| Battery | Main bat. (rechargeable li-ion polymer, 3.7V, 3200 mAh) |
| Expansion Slot | MicroSD/TF, maximum capacity of 32G |
| SIM Slot | 1 PSAM, 1 SIM, 1 MicroSD |
| Audio | 0.5W |
| Camera | OV 5M pixels, auto focus (optional) |
| Performance Characteristics | |
| CPU | Cortex-A9 1GHz dual core |
| OS | Android 4.0.4 |
| Memory | 512MB RAM(optional)/1GB RAM, Build-in 4GB Flash |
| Interface | USB Micro-B, serial port RS-232(TTL) |
| Storage Card Type | MicroSD card |
| Maximum Expansion Storage | 32GB |
| User Environmental Characteristics | |
| Operating Temperature | -10°C to 50°C |
| Storage Temperature | -40°C to 70°C |
| Humidity | 5%RH-95%RH (non-condensing) |
| Dropping Survive | 1.2m/3.9ft. drop, 6 sides (concrete floor under operating temp.) |
| Sealing | IP64, IEC compliance |
| Wireless Communication | |
| WAN | WCDMA/HSDPA/HSPA+ (850/2100MHz), |
| WLAN | IEEE802.11b/g/n, internal antenna |
| WPAN | Bluetooth v2.1+EDR |
| Data Collection | |
| Barcode Scan Engine | 1D barcode (Symbol SE955, laser, hardware decoding): |

| | |
|------------------------|---|
| | 2D CMOS laser scanner: Symbol SE4500 |
| RFID | LF 125KHz/134.2KHz, HDX/FDX-B(optional) |
| | HF 13.56MHz, ISO14443A/ISO15693(optional) |
| | UHF 860-960MHz, EPC C1 GEN2/ISO18000-6C |
| Developing Environment | |
| SDK | MMS SDK |
| Programming Language | Java |
| Developing Tool | Eclipse |